
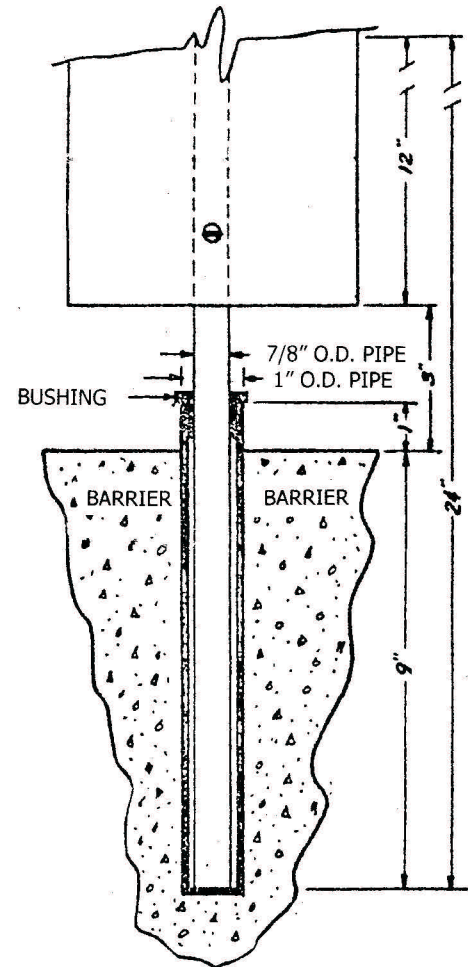


CONSTRUCTION BARRICADE DELINEATION INSTALLATION INSTRUCTIONS

**INSERT 10" X 1" I.D. GALVANIZED PIPE
INTO TOP OR BARRIER WHEN FORMING,
LEAVE 1" EXTENSION**

**DRILL EXISTING BARRIERS 9" AND INSERT
10" X 1" I.D. GALVANIZED PIPE**

**ASSEMBLE DELINEATION AND INSERT IN
BUSHING TO MAXIMUM DEPTH**

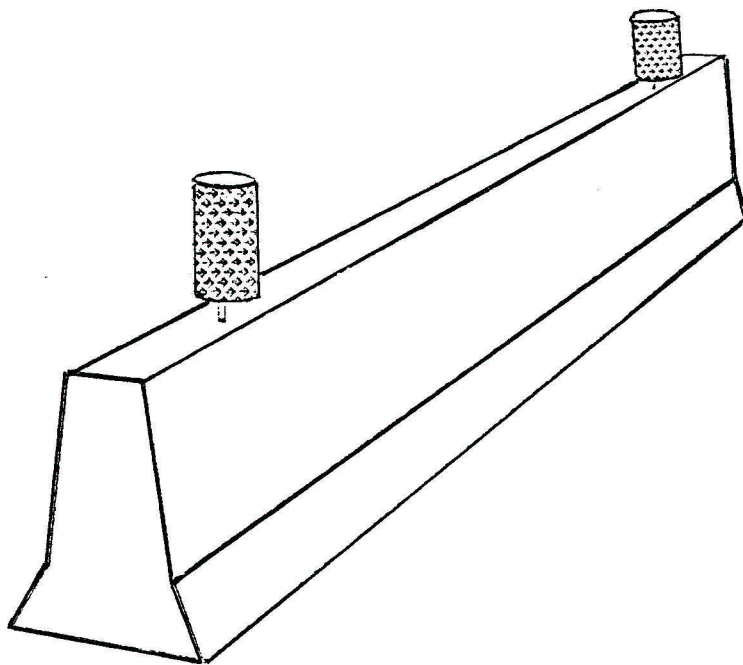

**DELINEATOR IS SUFFICIENTLY RIGID ENOUGH
TO WITHSTAND WIND LOAD OF UP TO 350 MPH**

**DELINEATOR IS FRAGILE ENOUGH TO COLLAPSE
FROM DIRECT HITS ON THE POST WITHOUT
DAMAGING VEHICLES**

DELINEATOR IS VISIBLE FROM 360°

